


Quick Installation Guide

**Does not include network setup
LV104-M34-42F-W1

1 Determine Camera View

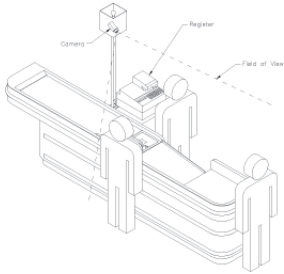

2 Mount LaneVision Pole to Checkstand

**Mounting Screws Not Included




3 Remove screws from enclosure lid and save for reassembly

4 Place clear cover followed by enclosure base then camera assembly

Warning: Be sure to carefully feed the power & cable through the middle of the cover and base. Align cover, base & camera assembly so it will face the intended field of view.

5 Secure the enclosure & camera assembly by using saved Black machine screws fastened with washer & nut. Place Camera Mount on Mount Base for proper view at this time.

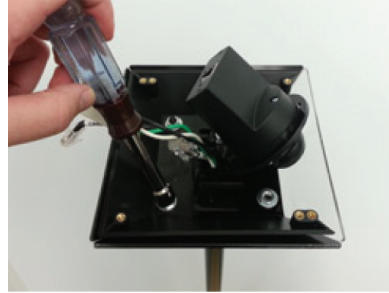


6 Connect camera & wireless router to marked ethernet jacks.



7 Connect POE power inserter to marked ethernet jacks and to electrical power source.




8 Connect lid to enclosure with nylon plugs.

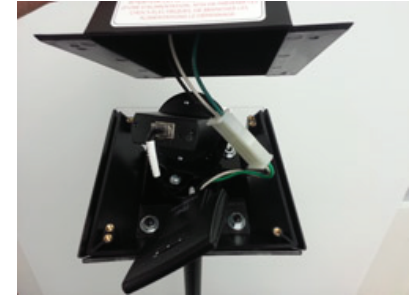

9 Place lid onto enclosure & secure lid to enclosure base with 2 flush mount screws (M4x6mm).



10 Place shade over enclosure and secure with the 4 remaining screws (M4x10mm).

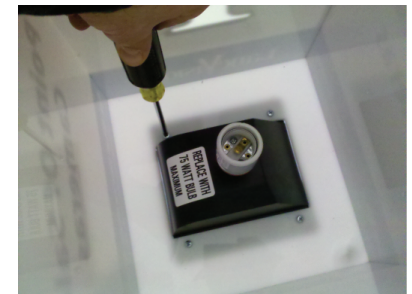

11 Installation Complete!